


**Betriebsanleitung**  
**Mode d'emploi**  
**Operating instructions**

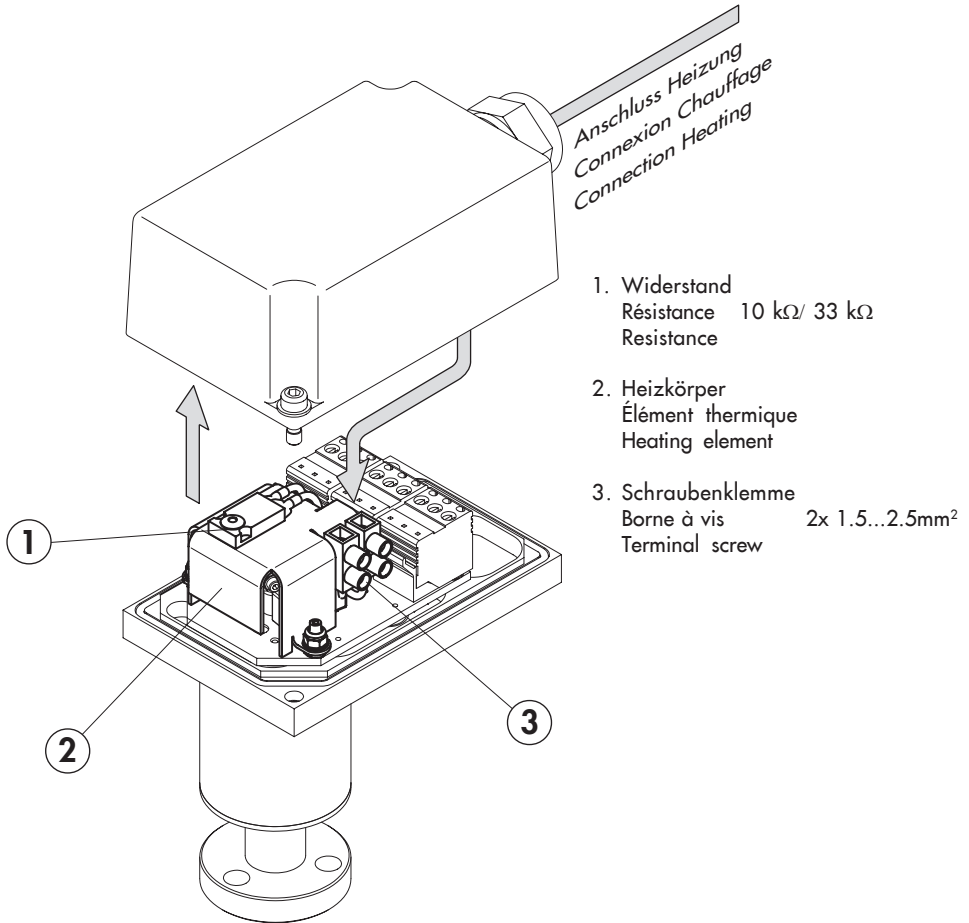

## **Spezifikationen / Spécifications / Specifications**

---

Umgebungstemperatur/ Température ambiante/ Ambient temperature: -55....+80°C

### **Anschlüsse / Connexions / Connections**

---

Schraubenklemme/ Borne à vis/ Terminal screw: 2x 1.5...2.5mm<sup>2</sup>

Heizung Zub. / Chauffage Acc./ Heating Acc. **68**:  $U_{\text{SUPPLY}} = 120...127 \text{ VAC/DC}$   
 $I_{\text{max}} = 6 \text{ A}$   
 $R = 10 \text{ k}\Omega$

Heizung Zub. / Chauffage Acc./ Heating Acc. **69**:  $U_{\text{SUPPLY}} = 220...240 \text{ VAC/DC}$   
 $I_{\text{max}} = 6 \text{ A}$   
 $R = 33 \text{ k}\Omega$